



INSTALLATION INSTRUCTIONS
2195 PANIC W/30-821R PKG

MOUNTING INSTRUCTIONS:

1. ATTACH PANIC HEAD & RISER TO ACTIVE STILE,
 INSERT RACK SUB-ASSY & POSITION
 GEAR ACTUATOR (REF. DETAIL "A")

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED		APPROVALS	DATE
DECIMAL DIMENSIONS .XX	± .010	APPROVED	
DECIMAL DIMENSIONS .XXX	± .005	CHECKED	
ANGULAR ±	FRANCTIONAL ± 1/64	DRAWN	RM 2/18/93
MATERIAL		SCALE	NONE



Jackson
EXIT DEVICE
 3474 UNION PACIFIC AVE.
LOS ANGELES, CALIF. 90033

NEXT ASSY.	FINISH	INSTALLATION 2195 PANIC DEVICE	SHEET 2 OF 2 SHEETS
QTY. USED	HEAT TREAT		DWG. NO. 10-795