


ADAPTOR MUST BE INASTALLED WHEN LOCK CYLINDER IS USED.

FOR USAGE WITH RIM CYL. INSTALL ADAPTOR AS SHOWN PER DETAIL "A".

FOR USAGE WITH MORTISE CYL. INSTALL ADAPTOR AS SHOWN PER DETAIL "B".

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	
DECIMAL DIMENSIONS .XX	± .010
DECIMAL DIMENSIONS .XXX	± .005
ANGULAR ±	FRANCIONAL ± 1/64
MATERIAL	

APPROVALS		DATE
APPROVED		
CHECKED		
DRAWN	M.G.	7/9/93
SCALE		NONE

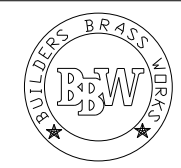

**Jackson**  
EXIT DEVICE

3474 UNION PACIFIC AVE.  
LOS ANGELES, CALIF. 90023

NEXT ASSY.	FINISH
QTY. USED	HEAT TREAT

ADAPTOR ORIENTATION

SHEET 1 OF 1 SHEETS	
DWG. NO.	REV.
10-688	