



DOGGING INSTRUCTIONS
TO DOG:
 FULLY DEPRESS TOUCH BAR, INSERT KEY, TURN COUNTERCLOCKWISE UNTIL IT STOPS. RETURN KEY TO CENTER POSITION AND REMOVE.
TO UNDOG:
 INSERT KEY, TURN CLOCKWISE UNTIL IT STOPS, RETURN KEY TO CENTER POSITION AND REMOVE.

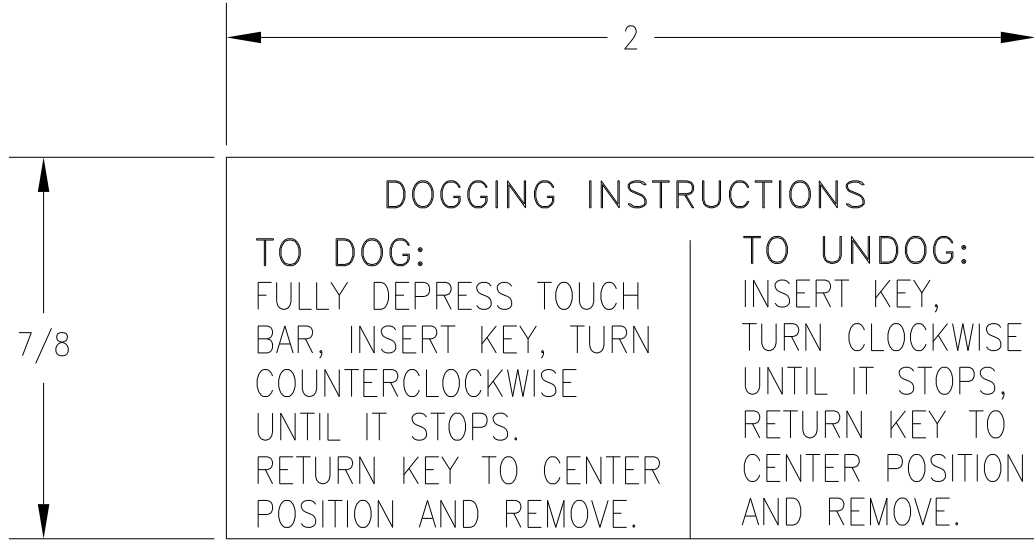

NOTES:

1. PRESSURE SENSITIVE ADHESIVE STICKER.
2. FINISH:
 BLACK LETTERING WITH WHITE BACKGROUND.

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED DECIMAL DIMENSIONS .XX ± .010 DECIMAL DIMENSIONS .XXX ± .005 ANGULAR ± ° FRACTIONAL ± 1/64		APPROVALS APPROVED CHECKED DRAWN R.M. 10/13/97		DATE 10/13/97		 <p>3447 UNION PACIFIC AVE. LOS ANGELES, CALIF. 90023</p>
FILE NO.	MATERIAL NOTE: 1.	SCALE NONE		SHEET 1 OF 1 SHEETS		
NEXT ASSY. 2086C-KITS	FINISH NOTE: 2.	DOGGING INSTRUCTIONS		DWG. NO.	REV.	
QTY. USED 1	HEAT TREAT	2086C C.V.R. DEVICE		10-910	A	